


(a) First run of boards

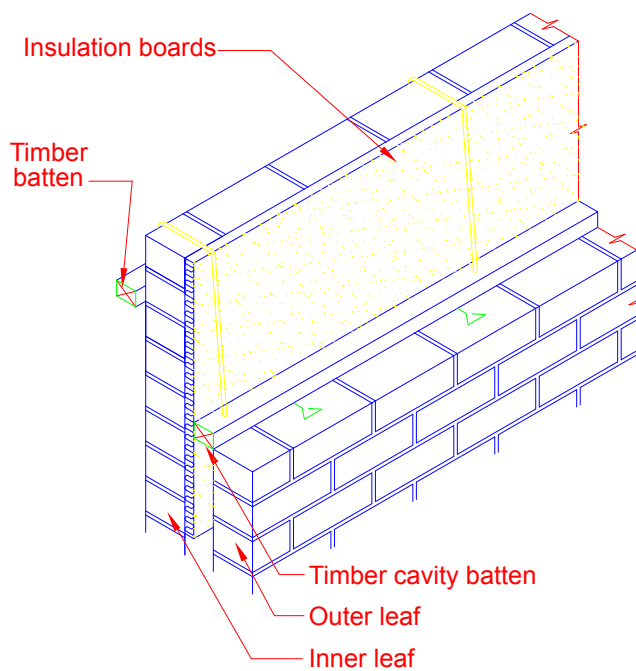

(b) Use of cavity batten

Figure 1

Typical installation details